


# RETRO STEAM WORKS


## CHANDELIER, SEMI-FLUSH & PENDANT INSTALLATION GUIDE

For any inquiries or additional help, please contact [customerservice@retrosteamworks.com](mailto:customerservice@retrosteamworks.com)


### INCLUDED HARDWARE FOR CHANDELIERS, SEMI-FLUSH, AND PENDANTS




Fixed Crossbar

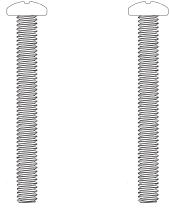

8-32 Crossbar Screws (2)



Wire Nuts (3)



Acorn Nuts (2)

### A SPECIAL NOTE ABOUT UNSEALED BRASS AND AGED-BRASS FINISHES

Our brass and aged-brass finishes are unsealed. Brass is particularly susceptible to tarnishing with oils from our hands and chemicals like ammonia in Windex. Use gloves while installing these fixtures to prevent fingerprinting. If cleaning the brass is needed, we use Brasso (not for aged-brass finishes). If you choose, you may clear coat the brass to prevent any tarnishing with a clear spray lacquer or rubbed mineral oils.

### INSTALLATION INSTRUCTIONS

Please note: It is always recommended that a licensed electrician install electrical fixtures. **MAKE SURE THE ELECTRICITY IS OFF.**

#### CHANDELIER/SEMI-FLUSH

Screw the provided 8-32 Crossbar Screws into the innermost threaded holes.


Wrap ground wire around ground screw on crossbar, then attach to ground wire from electrical box with wire nut.

Use screws provided with electrical box to attach crossbar to electrical box. **\*NOT INCLUDED\***

Secure white and black wires with the provided wire nuts.


Secure fixture using the acorn nuts.

Thread black & white wires through down rod then attach to canopy.

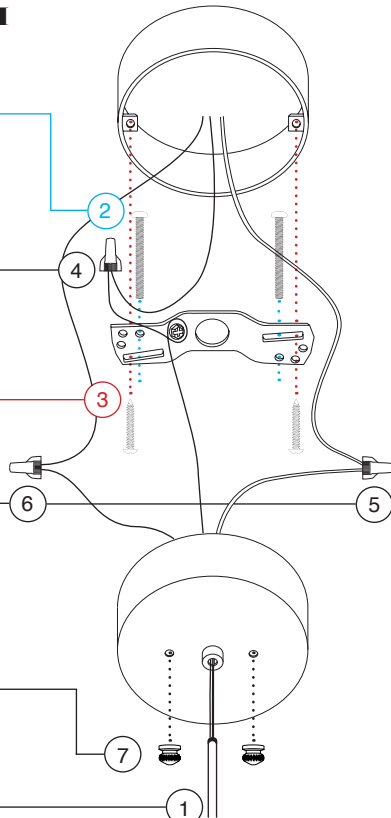

#### PENDANT

Pendant fixtures would follow the same installation instructions as the chandeliers, however you can adjust the wire length as needed for your installation.

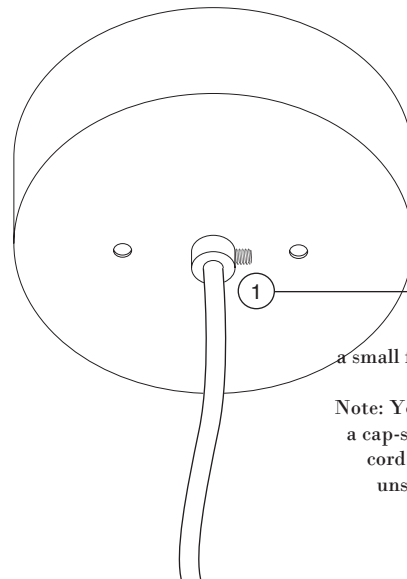

Loosen the black plastic set screw with a small flat head screw driver to adjust the cord length  
Note: Your pendant might have a cap-strain relief to adjust the cord height, in that case just unscrew the cap, adjust the cord, screw the cap on.